


Electrical Connections for Buck-Boost Applications

8

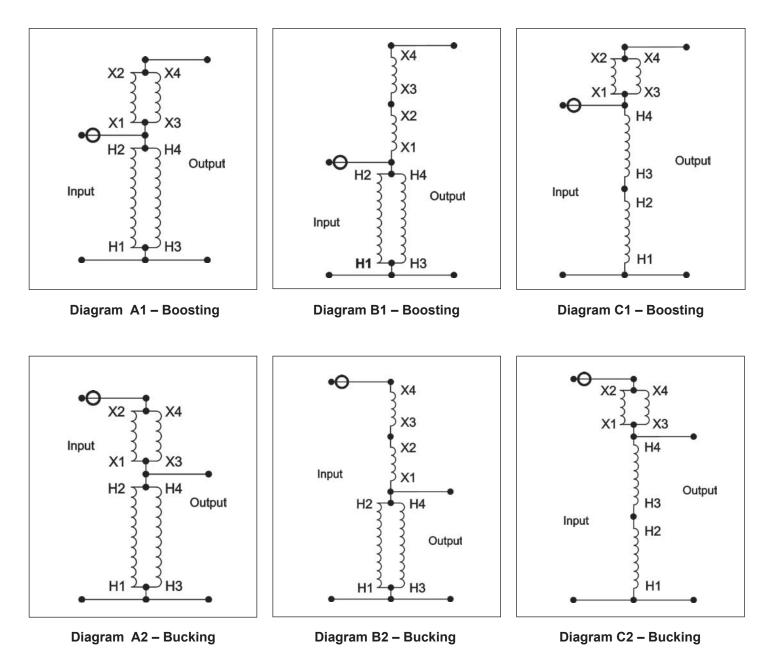



The **O** symbol shown on these connection diagrams indicates where fuses or breakers should be field installed.

Application Note: On all auto-wye connections, the source neutral must be present and connected to the transformer bank. If source neutral is not present, do not use an auto-wye connection.



Electrical Connections for Buck-Boost Applications

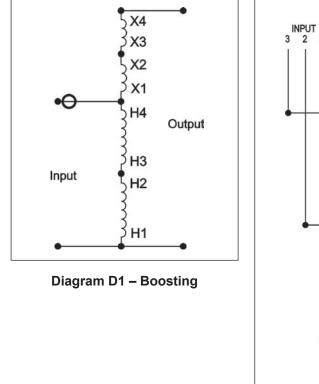

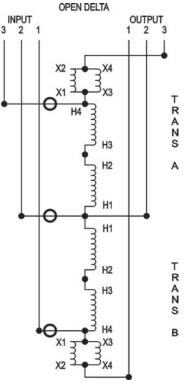



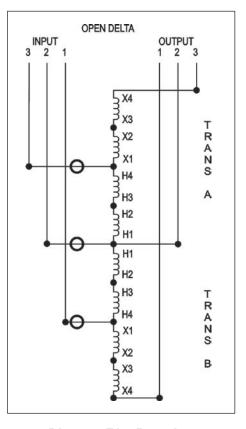


Diagram E1 – Boosting



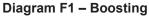

Visit our website at www.solaheviduty.com or contact **Technical Services** at **(800) 377-4384** with any questions.

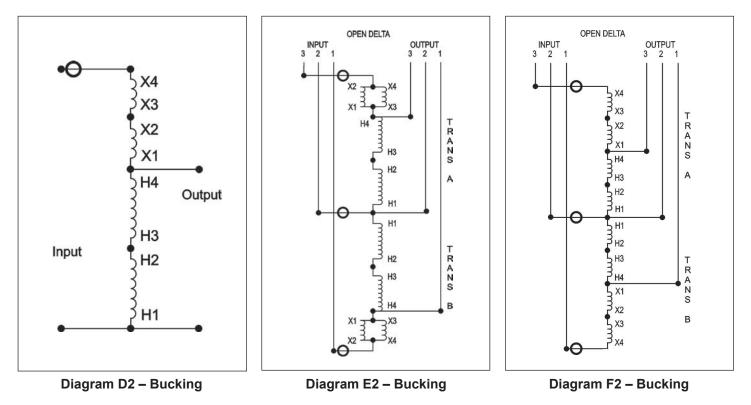

OUTPUT

т

R

A N

S

A

т R

A N S

в

т

R

A N S

С

т

R

A N S

A

T R

ANS

в

т R

AN

s

C


OUTPUT

2 3 N

2 3 N

Electrical Connections for Buck-Boost Applications

8

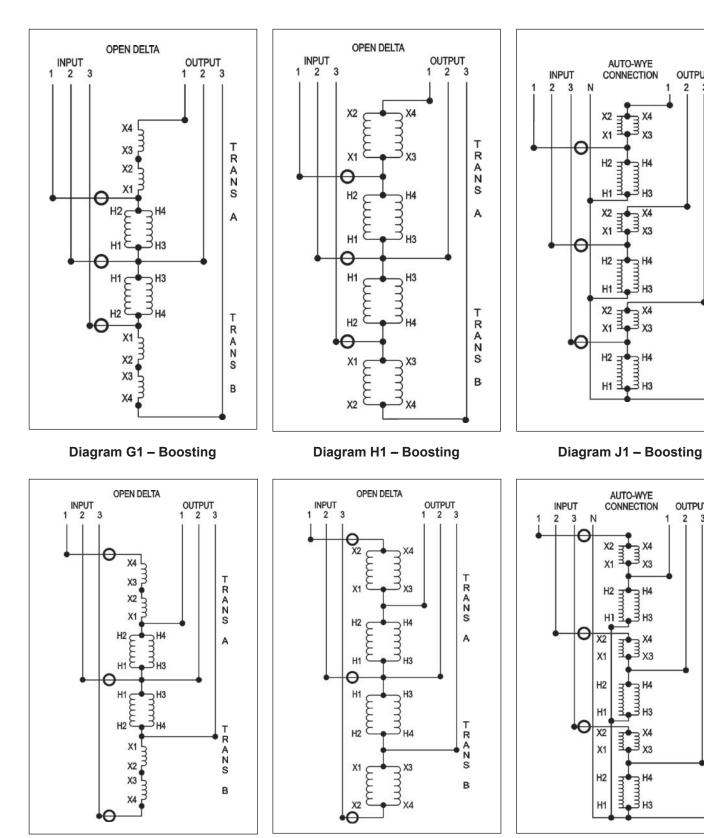


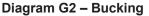


Diagram H2 – Bucking



Visit our website at www.solaheviduty.com or contact Technical Services at (800) 377-4384 with any questions.

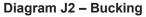

Electrical Connections for Buck-Boost Applications

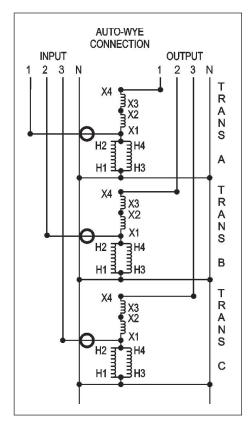
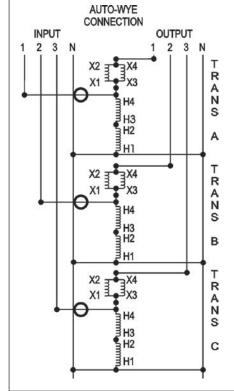


Diagram K1 – Boosting




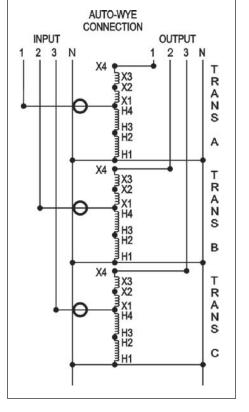


Diagram L1 – Boosting

Diagram M1 – Boosting

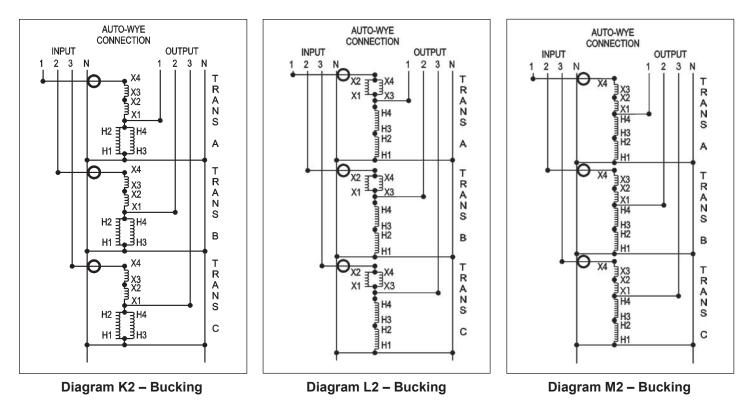

Visit our website at www.solaheviduty.com or contact **Technical Services** at **(800) 377-4384** with any questions.